

---

Report no.:	<b>202049759</b>
Test no.:	<b>S200623002</b>
Test sample:	<b>Hernik Kidsflex</b>
Regulation:	<b>based on ECE R44-04</b>

---

# Test report

## *Dynamic test*

Customer:	HERNIK GmbH Bodenseestr. 25 83059 Kolbermoor
Approval number:	--
Series number:	KL1-2020-1083 / WE19914
Impact:	frontal
Installation:	forward
Attachment CRS:	3- point seatbelt and fix system
Securing dummy:	3- point seatbelt with 5- point fixbelt
Dummy / mass:	P6 / 22kg
Adjustment CRS:	middle position (angular adjustment)
Headrest:	Kidsflex, size 1
Remarks:	with thorax-, shoulder-, pads, isofix adapter, angular adjustment, abductions block additional head support
Passed / failed:	<b><i>passed</i></b>

---

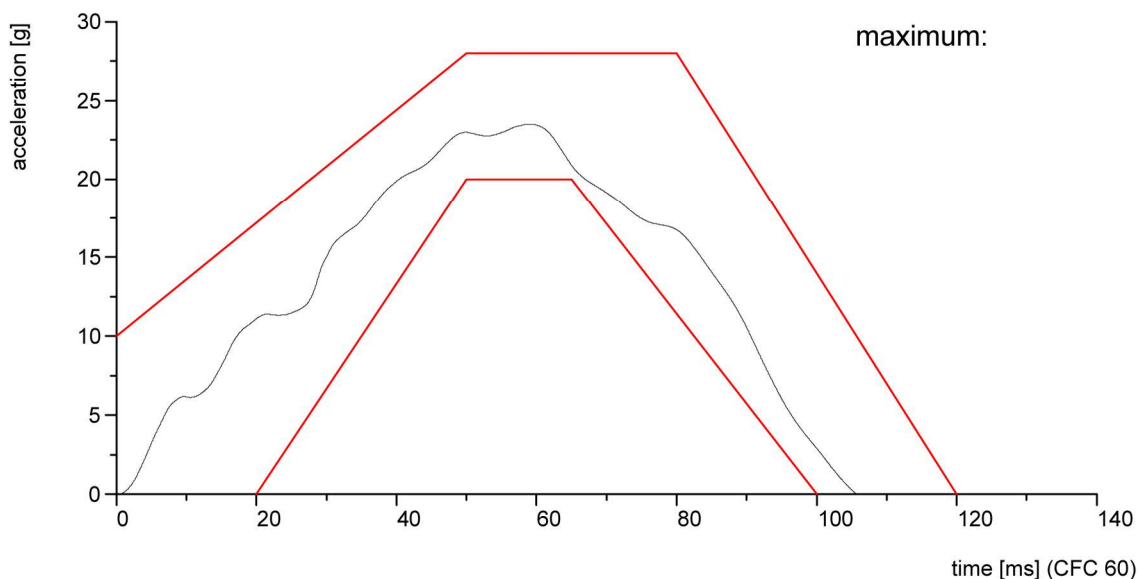
Report no.: 202049759  
Test no.: S200623002  
Test sample: Hernik Kidsflex  
Regulation: based on ECE R44-04

---

**Results**

23.06.2020 / page 2

Head forward displ. / time: approx. 460mm at 88ms  
Exceeding plane AB/FG: no  
Exceeding plane AD/FD: no  
Exceeding plane DE: n/a  
Abdominal injury: no  
Contact 100 mm steel tube: n/a  
Remarks test sample:

**Measurements****sled:***impact velocity:* 48.5 km/h*brake distance:* 660 mm*maximum:* 23.5 g

Report no.: 202049759  
Test no.: S200623002  
Test sample: Hernik Kidsflex  
Regulation: based on ECE R44-04

**Dummy**

23.06.2020 / page 3

