
Report no.: **202049759**
Test no.: **S200623003**
Test sample: **Hernik Kidsflex**
Regulation: **based on ECE R44-04**

Test report

Dynamic test

Customer: **HERNIK GmbH**
Bodenseestr. 25
83059 Kolbermoor

Approval number: **--**
Series number: **KL2-2020-1126 / WE19914**
Impact: **frontal**
Installation: **forward**
Attachment CRS: **3- point seatbelt and fix system**
Securing dummy: **3- point seatbelt with 5- point fixbelt**
Dummy / mass: **P10 / 32kg**
Adjustment CRS: **middle position (angular adjustment)**

Headrest: **Kidsflex, size 2**
Remarks: **with thorax-, shoulder-, pads, isofix
adapter, angular adjustment, abductions
block additional head support**

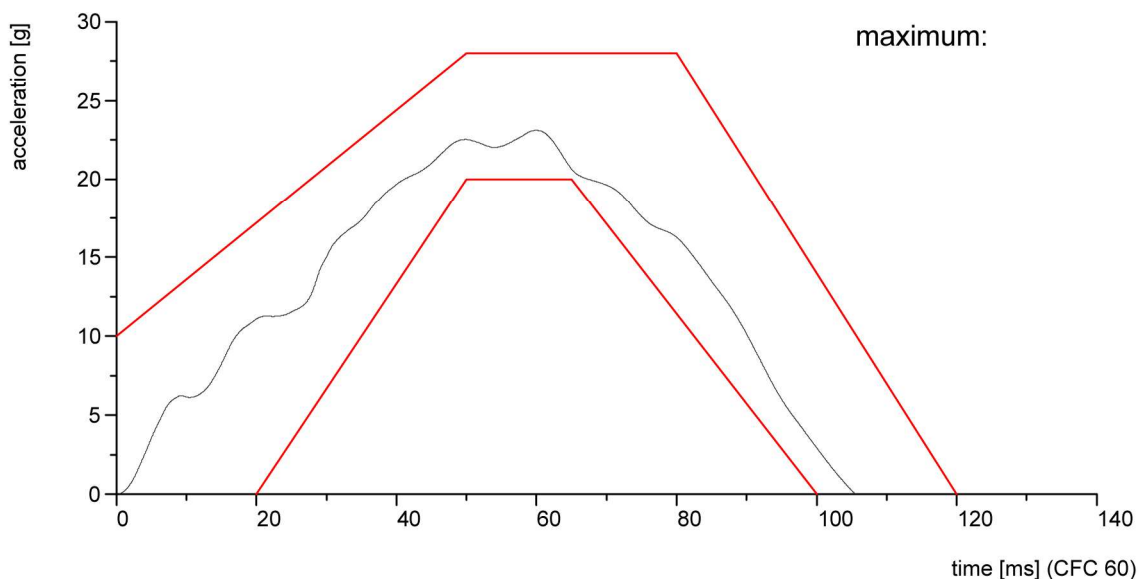
Passed / failed: ***passed***

Report no.: 202049759
Test no.: S200623003
Test sample: Hernik Kidsflex
Regulation: based on ECE R44-04

Results

23.06.2020 / page 2

Head forward displ. / time: approx. 510mm at 102 ms
Exceeding plane AB/FG: no
Exceeding plane AD/FD: no
Exceeding plane DE: n/a
Abdominal injury: no
Contact 100 mm steel tube: n/a
Remarks test sample: --

Measurements**sled:***impact velocity:* 48.6 km/h*brake distance:* 660 mm*maximum:* 23.1 g

Report no.: 202049759
Test no.: S200623003
Test sample: Hernik Kidsflex
Regulation: based on ECE R44-04

Dummy

23.06.2020 / page 3

