
Report no.:	202049759
Test no.:	S200702001
Test sample:	Hernik Kidsflex
Regulation:	Only strength test (pulse based on ECE-R44-04)

Test report

Dynamic test


Customer:	HERNIK GmbH Bodenseestr. 25 83059 Kolbermoor
Approval number:	--
Series number:	WE19995
Impact:	frontal
Installation:	forward
Attachment CRS:	3- point seatbelt and fix system
Securing dummy:	3- point seatbelt with 5- point fixbelt
Dummy / mass:	H3 50% / 75kg
Adjustment CRS:	middle position (angular adjustment)
Headrest:	highest position,
Remarks:	with thorax pads, isofix adapter angular adjustment,
Passed / failed:	<i>without rating</i> <i>only strength test</i>

Report no.: 202049759
Test no.: S200702001
Test sample: Hernik Kidsflex
Regulation: Only strength test (pulse based on ECE R44-04)

Results

02.07.2020 / page 2




Head forward displ. / time: w/o
Exceeding plane AB/FG: w/o
Exceeding plane AD/FD: w/o
Exceeding plane DE: w/o
Abdominal injury: w/o
Contact 100 mm steel tube: w/o
Remarks test sample: - opening of right shoulder belt
during test
After test:
- thread out of fixbelt buckle

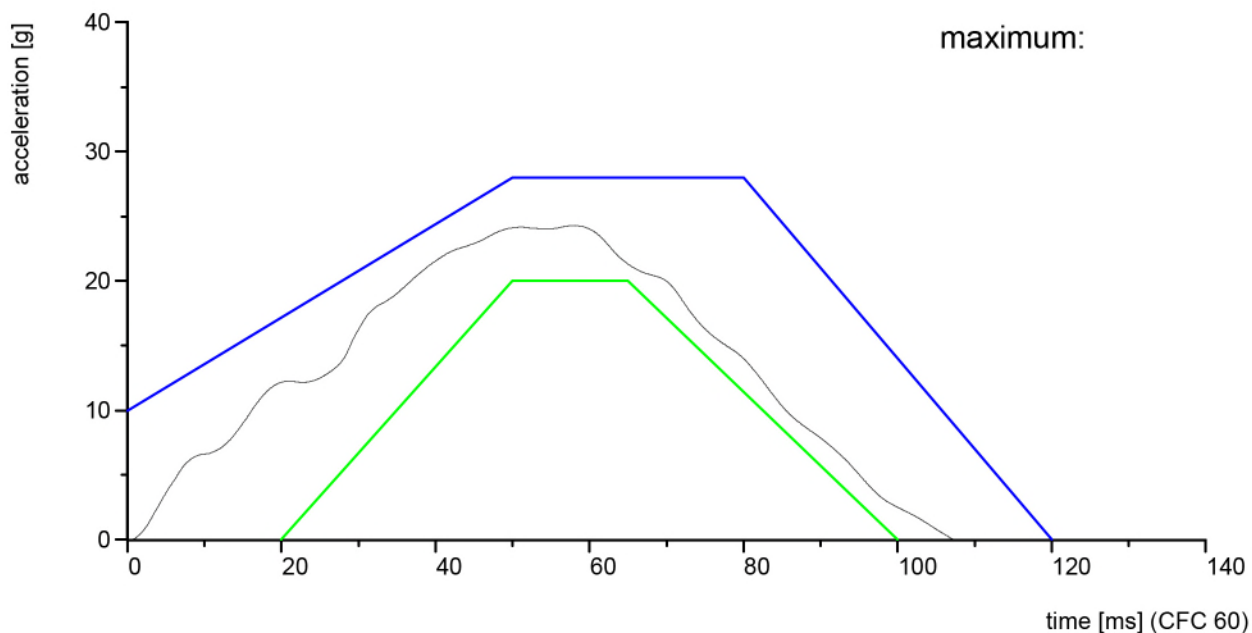Measurements**sled:***impact velocity:* 48.6 km/h*brake distance:* 630 mm*maximum:* 24.3 g

Report no.: 202049759
Test no.: S200702001
Test sample: Hernik Kidsflex
Regulation: Only strength test (pulse based on ECE R44-04)

Dummy

02.07.2020 / page 3

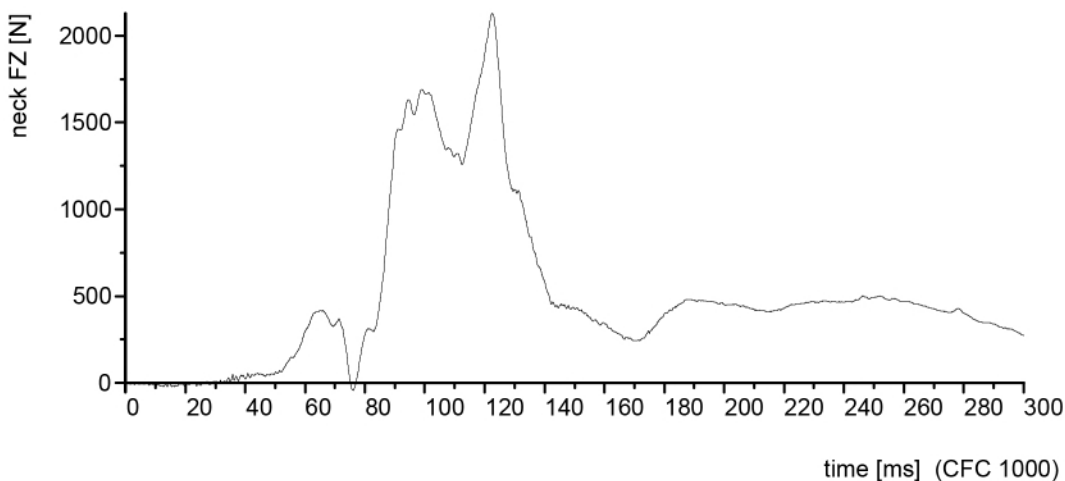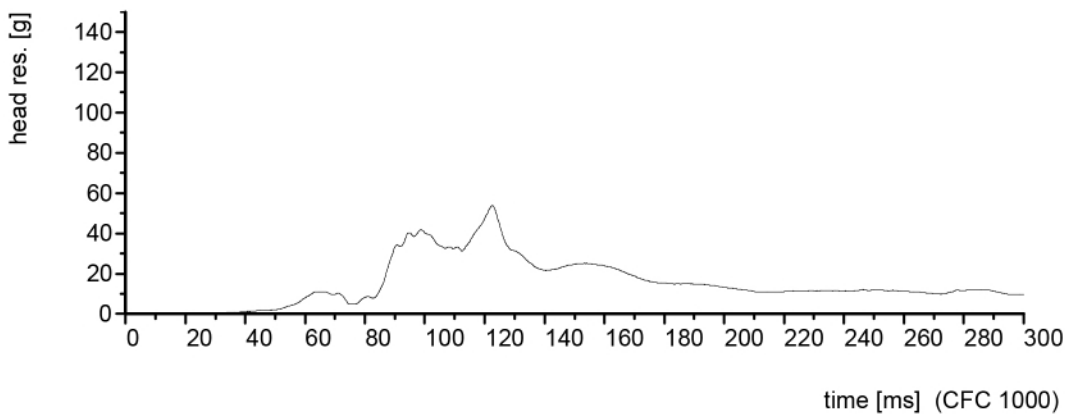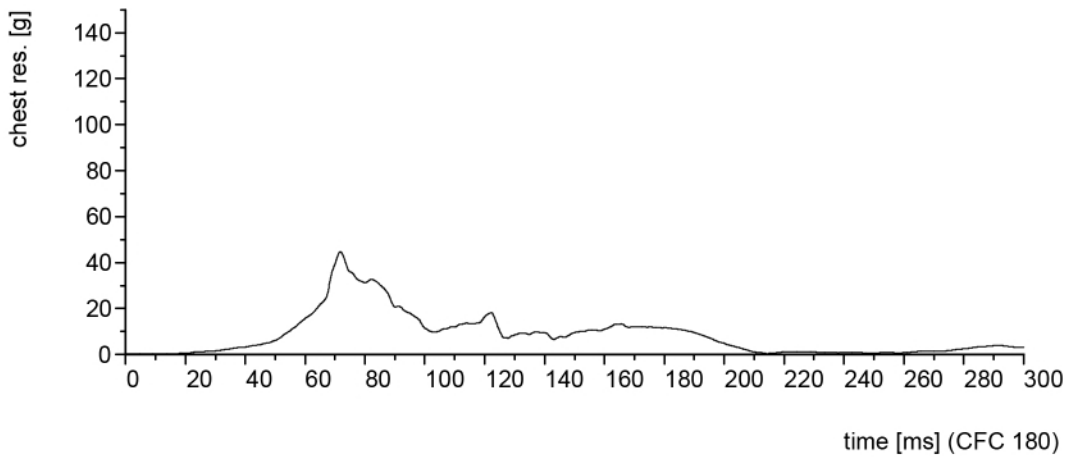

Report no.: 202049759
Test no.: S200702001
Test sample: Hernik Kidsflex
Regulation: Only strength test (pulse based on ECE R44-04)

Dummy

02.07.2020 / page 4

